

Свойство LastErrorMsg

```
BSTR LastErrorMsg;
```

Описание:

Только чтение. Содержит текст ошибки выполнения функции.

From: <https://wiki.ilexx.ru/> Штрих-М: Документация

Permanent link:

https://wiki.ilexx.ru/doku.php?id=%D0%BC%D0%B5%D0%BD%D0%B5%D0%B4%D0%B6%D0%B5%D1%80_%D0%BE%D0%BF%D0%BB%D1%2%-%D0%BF%D0%BE%D0%B4%D0%BA%D0%BB%D1%8E%D1%87%D0%85%D0%BD%D0%BB%D0%85%D1%81%D0%B2%D0%BE%D0%B9%D1%81%D1%82%D0%B0%lasterrmsgrev-1366647759

Last update: 2013/04/22 20:22

